


Chamfer Clip


Instruction Sheet

STEGMEIER[®]
LLC


www.stegmeier.com

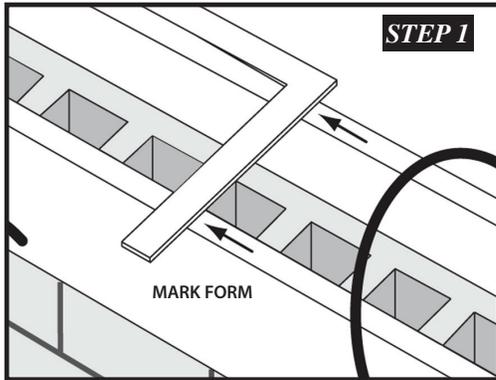


Step 1. Using a framing square, mark the location of the joints to be tooled.

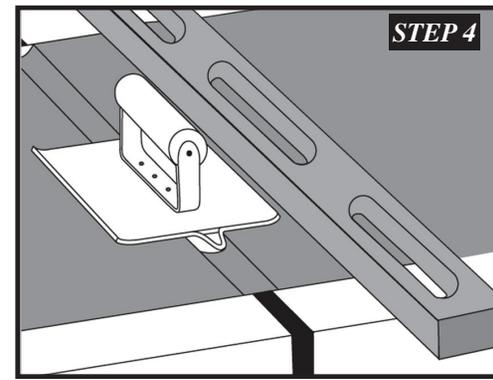


Step 4. Tool the joints at the appropriate time using the lay-out marks as a guide.

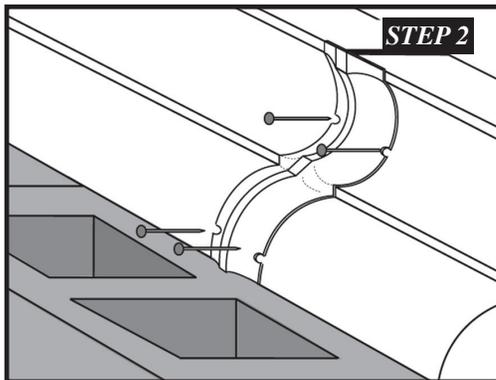


Step 2. Place the Chamfer Clip into the form and pin in place with the nails provided.

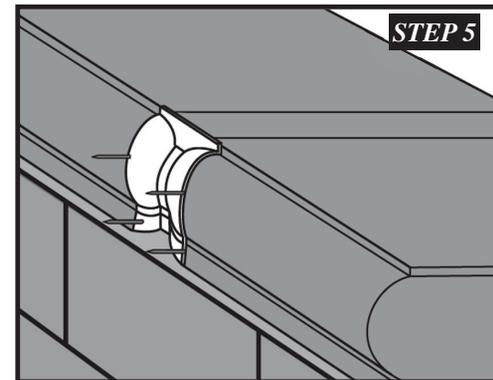

Step 5. Strip the Wall Cap form, exposing the Chamfer-Clip. Carefully remove the Chamfer Clip and wipe clean immediately for re-use.

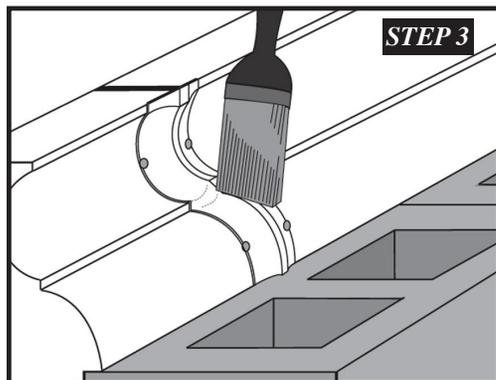

Step 3. Apply a coat of "Frontier Release Agent" to Chamfer Clip and allow to dry.

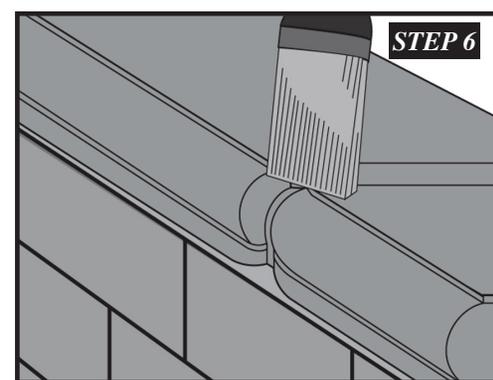

Step 6. Joints may be finished with a damp brush if desired.

Tech Support (800) 382-5430